


## Non-Stop 673 DT Tilt Adjustable Instruction

**TO UNLOCK TILT - Push Tilt Adj. lever in, then turn lever toward the rear of the chair. Lever should be facing toward the back of the seat.**

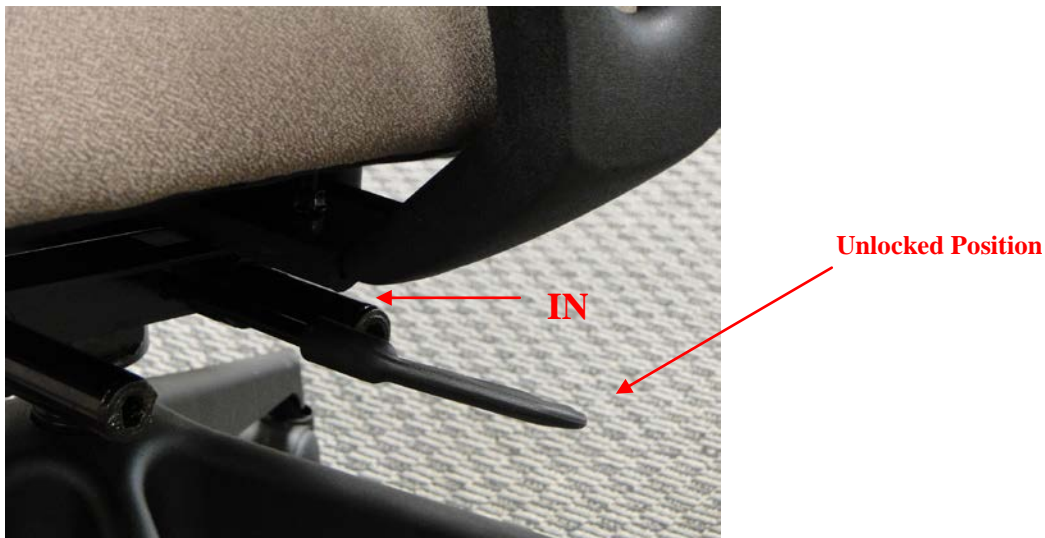

**TO LOCK TILT – Turn lever toward the front of the seat till you hear it “click”. Lever should be pointing on the floor.**

